


پانورامیک

PANORAMIC

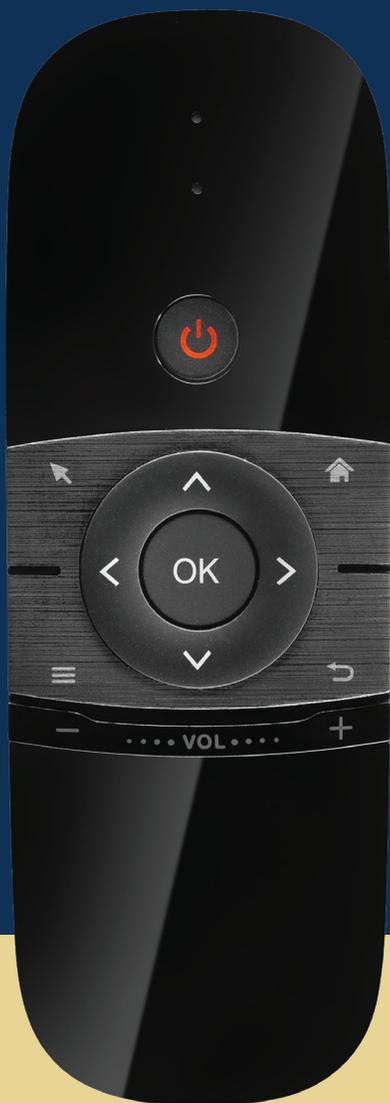


راهنمای استفاده از
کنترل هوشمند
جادویی

مدل: FS007

Instructions For
Using Magic
Airmouse
Remote

Model No.: FS007

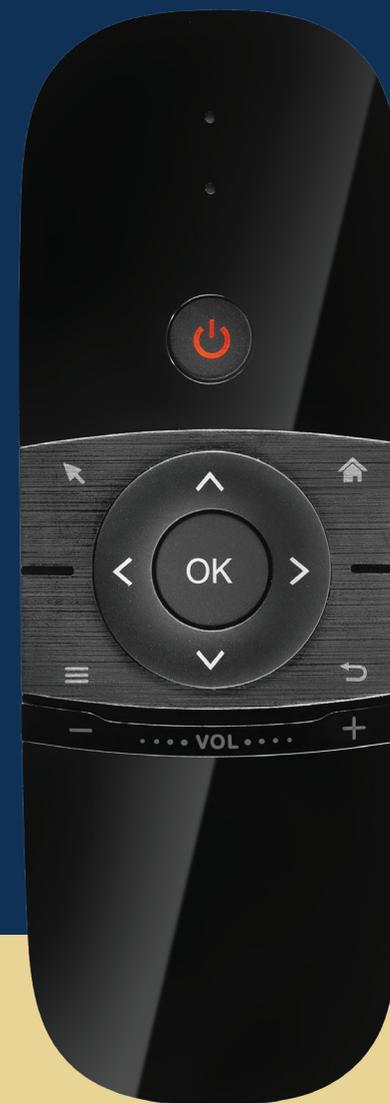

چه مقدار حالت بزرگتر باشد، ایرماوس سریعتر حرکت می‌کند. برای تنظیم سرعت ایرماوس: کلید OK و کلید افزایش صدا (VOL +) را به‌طور همزمان به‌مدت سه ثانیه فشار داده و نگه دارید، پس از اینکه نشانگر دوبار چشمک زد دکمه‌ها را رها کنید، سرعت ماوس یک درجه افزایش می‌یابد. کلید OK و کاهش صدا (VOL -) را ۳ ثانیه فشار داده و نگه دارید، پس از اینکه نشانگر دوبار چشمک زد آنها را رها کنید، سرعت ماوس یک درجه کاهش می‌یابد.

دستورالعمل‌های عملکرد کامل صفحه کلید

صفحه کلید کامل شامل ۴۵ کلید است. برای ورودی انگلیسی سیستم تلویزیون، Enter+Fn را فشار دهید تا عملکردهای سفید رنگ روی دکمه‌ها به‌طور پیش‌فرض ارسال شود (۲۶ حرف انگلیسی در حالت پیش‌فرض، با حروف کوچک تولید می‌شوند). برای ترکیب ۲۶ حرف Shift را فشار داده و نگه دارید. مقدار پیش‌فرض، ایجاد ۲۶ حرف به‌صورت حرف بزرگ است (زمانی که کلید caps فشار داده نشده باشد). علامت سؤال، زیرخط، اضافه شدن... در ترکیب با کلید شیفت فعال می‌شوند. کلید سوئیچ عملکرد با caps به‌عنوان حرف‌های بزرگ/کوچک. کلید Fn را فشار دهید تا خروجی کاراکترهای آبی روشن شوند.

تذکر: زمانی که کلید یک‌بار فشار داده می‌شود، عملکرد صفحه کلید بین صفحه کلید عادی و صفحه کلید ترکیبی، تغییر می‌کند. با روشن کردن کلید Fn کاراکتر آبی به‌طور پیش‌فرض باز می‌شود. برای عملکرد کاراکترهای فارسی زرد رنگ، باید دکمه مورد نظر به‌همراه شیفت فشار داده شود. علامت سؤال، زیرخط، اضافه شدن... در ترکیب با کلید شیفت فعال می‌شوند. کلید سوئیچ عملکرد با caps به‌عنوان حرف‌های بزرگ/کوچک. کلید Fn را فشار دهید تا خروجی کاراکترهای آبی روشن شوند.

تذکر: زمانی که کلید Fn یک‌بار فشار داده می‌شود، عملکرد صفحه کلید بین صفحه کلید عادی و صفحه کلید ترکیبی، تغییر می‌کند. با روشن کردن کلید Fn کاراکتر آبی به‌طور پیش‌فرض باز می‌شود. برای عملکرد کاراکترهای فارسی زرد رنگ، باید دکمه مورد نظر به‌همراه shift فشار داده شود.

عملکرد خودکار خواب و بیداری

چنانچه ۱۵ ثانیه هیچ یک از کلیدهای کنترل از راه دور فشرده نشود و با کنترل حرکت نکنند، کنترل از راه دور به‌طور خودکار وارد حالت استندبای می‌شود و چراغ آبی خاموش می‌شود. برای فعال کردن کنترل از راه دور کلیدی را فشار دهید، درحالی‌که ایرماوس در حالت Pair باقی بماند.

مشخصات

حالت بیسیم: **بلوتوث 4.2**
فراکانس مدلاسسیون: **2.4~2.4835GHz (کیگه‌رتز)**
درجه حرارت کار: **-20°C~65°C**
نوع باتری: **باتری لیتیوم 3.7V / 300mah**
فاصله‌ی کنترل از راه دور: **کمتر از ۸ متر**
پورت شارژ: **یواس‌بی (USB) میکرو**

توضیحات عملکرد اصلی

- چراغ نمایشگر: چراغ هنگام کارکرد آبی رنگ و هنگام شارژ قرمز می‌شود.
- دکمه‌ی Power: تلویزیون را روشن یا خاموش می‌کند.
- دکمه‌ی ماوس: در حالت پیش‌فرض کارخانه (حالت انتشار مادون قرمز) این کلید را فشار دهید تا کلید منیع شود. پس از فشردن دکمه‌ی ماوس برای ورود به تنظیمات یا ورود به یکی از برنامه‌های کاربردی (اپلیکیشن‌ها)، دستگاه فقط در حالت ماوس قابل استفاده می‌باشد و به تابع دیگری پاسخ نمی‌دهد.
- دکمه‌ی Home: برای ورود به محیط اسمارت کلیک کنید.
- دکمه‌های بالا/پایین: عملکرد بالا/پایین اضافه کردن و کم کردن کانال.
- دکمه‌های چپ/راست: برای انتخاب عملکرد حرکت به چپ/راست.
- دکمه‌ی MENU: به منوی اصلی دسترسی پیدا می‌کند.
- دکمه‌ی برگشت: به صفحه قبلی برمی‌گردد.
- +/ - VOI: صدای تلویزیون را افزایش یا کاهش می‌دهد.

دستورالعمل‌های عملیاتی

- حالت پیش‌فرض ما حالت انتشار مادون قرمز است. در این حالت، تنها دکمه‌های مربوطه در سمت A می‌توانند عمل کنند. اگر بخواهید از دکمه‌ی صفحه کلید کامل سمت B استفاده کنید، باید بلوتوث تلویزیون را روشن کنید و برای استفاده از آن به کنترل از راه دور ماوس متصل شوید.
- دستورالعمل‌های برقراری اتصال بلوتوث تلویزیون و کنترل از راه دور ماوس:
 - کلید OK و کلید Home را به مدت ۳ ثانیه فشار داده و نگه دارید، نور آبی‌دی چشمک خواهد زد که نشانگر ورود به حالت اتصال است؛ وارد تنظیمات تلویزیون شوید، گزینه‌ی بلوتوث را باز کنید، سیستم به دنبال دستگاه‌های بلوتوث می‌گردد. فهرست دستگاه‌های بلوتوثی که جستجو شده‌اند، در سمت چپ صفحه نمایش، نشان داده خواهد شد. FS007 را پیدا کرده و برای اتصال با دستگاه OK را فشار دهید. اگر اتصال به‌طور مداوم امکان‌پذیر نباشد، پس از ۳۰ ثانیه سه بار چشمک خواهد زد و سپس از حالت جفت شدن خارج می‌شود.
 - حالت بالا را تکرار کنید تا زمانی که جفت شدن موفق شود.




جابجایی در محدودیت عملکرد

- اگر صفحه اصلی ریموت به سمت شما باشد (طرف A) صفحه کلید (طرف B) غیرفعال می‌شود.
- اگر صفحه کلید ریموت (طرف B) به سمت شما باشد عملکرد طرف دیگر ریموت غیرفعال خواهد شد.

تنظیم CPI (ایرماوس)

CPI (سرعت حرکت اشاره گر ماوس) به چهار حالت، به ترتیب ۱، ۲، ۳، ۴ تقسیم می‌شود و حالت پیش‌فرض آن، حالت دوم است. هر

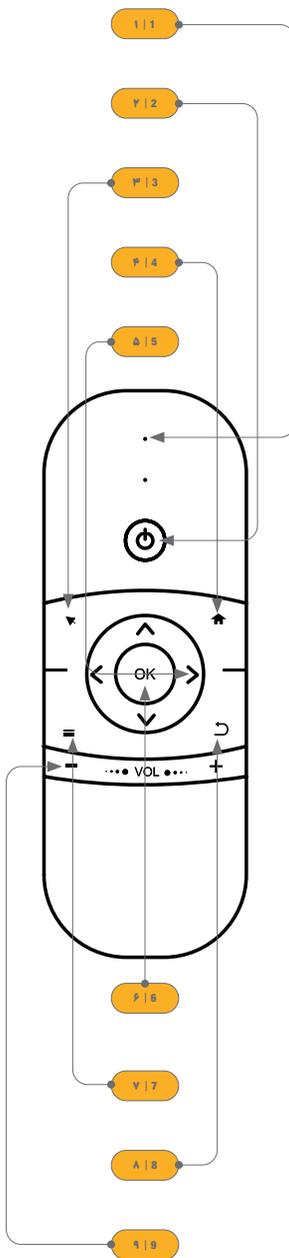

Key Function Description:

- Indicator light description:** The indicator light is blue when working; The indicator light is red when charging.
- power:** Turn the TV on or off.
- Mouse button:** under the factory default state (infrared emission mode) of the remote control, press this key under launcher and TV to be the SOURCE function key; under launcher to enter the setting interface or enter an APP, the mouse key will no longer respond to the SOURCE function and directly respond to the mouse function; after the remote control is paired with Bluetooth, the remote control will have no SOURCE button function, directly it will be the air mouse function.
- Homepage:** Click to return to home interface.
- Up/down keys:** Response up and down selection, function/channel addition and subtraction function.
Left/right keys: Respond to left/right selection function.
- OK:** Press once response confirmation function.
- MENU:** To accesses the main menu.
- Return key:** Return to previous operation menu.
- VOL +/-:** Increases or decreases the TV volume.

Operation instruction:

- our default mode is infrared emission mode. In this mode, only the relevant buttons on A side can operate. If you want to use the B side full keyboard button, you need to turn on the TV Bluetooth function and pair with the mouse remote control to use it.
- Pairing instructions of TV Bluetooth and flying mouse remote control:** Press and hold the OK key and HOME key of the flying mouse remote control for about 3S, the indicator light will flash, indicating entering the pairing mode; Enter to TV settings, enter Network setting, open Bluetooth options, The system searches for Bluetooth devices. The list of Bluetooth devices searched will be displayed on the right side of the screen. Find FS007 and press OK to connect the device. if pairing is not possible all the time, it will flash three times after 30 seconds and then go out of pairing mode. Repeat the above until pairing is successful.

Roll over inhibit function

- When the function key faces up (side A), the output of the full keyboard (side B) is prohibited.
- When the full keyboard (side B) face up, the function key face (side A) is not allowed to output.

CPI adjust (Air mouse Function)

CPI adjustment function: CPI (mouse pointer moving speed) is the second gear by default (CPI is divided into four gears, 1.2.3.4 respectively). The larger the gear value is, the faster the air mouse moves. Air

mouse speed adjustment: Press and hold OK key and volume+ key at the same time for about 3 seconds, release after the working indicator flashes twice, CPI will increase gear 1 on the original basis; press and hold OK key and volume- key for about 3 seconds, release after the working indicator flashes twice, CPI will reduce gear 1 on the original basis.

Full keyboard operation instruction:

The full keyboard consists of 45 keys:
English input method status of TV system, press FN+ENTER key to send white key function by default (26 English letters are output in lowercase by default). Press and hold shift to combine 26 letters. The default value is to output, 26 letters in uppercase (when the caps key is not pressed) Question mark, underline, add must be output under the combination of shift key. Function switch key with caps as upper/ lower case letters. Press the FN key to turn on the output of blue characters and functions.



Remarks:

When the FN key is pressed once, the keyboard function switches between the normal key value and the combined key value. When the FN key is turned on, the blue character will be output by default. Yellow Persian characters need to press and hold shift to output.

Automatic sleep and wake up functions:

15 seconds after the remote control has no key or does not move the air mouse, the remote control automatically enters the standby mode, and the blue light goes out. Press any key to wake up the remote control, while the air mouse remains in the original state.

Specification:

Wireless mode: **Bluetooth 4.2 Modulation**
Frequency: **2.4~2.4835GHz**
Temperature working: **-20°C~65°C**
Battery type: **300mah/ 3.7V lithium battery**
Remote control distance: **<8m**
Charging Port: **micro USB**